



# OHandSetting Instruction Manual

## V1.4

Copyright ©2015-2025 OYMotion Technologies Co., Ltd.

Shanghai OYMotion Technologies Co., Ltd

[www.oymotion.com](http://www.oymotion.com)

[info@oymotion.com](mailto:info@oymotion.com)

## CONTENT

OHandSetting Instruction Manual .....	1
1. Software Usage and Installation .....	3
2. Run Software .....	4
3. Update Firmware .....	6
4. Basic Information Setting .....	11
5. Motor Parameters Setting .....	15
6. ROHand Control .....	17
7. Force Display .....	19
8. Action sequence .....	20
9. FAQs .....	21
10. Contact Details .....	22
11. Revision history .....	23

# 1. Software Usage and Installation

1.1 OHandSetting is a desktop tool designed for OYMotion's ROHand series dexterous hand products to complete firmware updates, position calibration, device ID settings, reading and writing limit current and PID parameters, setting and reading finger angles and speeds, and real-time display of motor current values, among other functions.

1.2 Installation: Open the website in the browser based on the dexterous hand model

1.3 **ROH-AP001:**

[https://github.com/oymotion/roh\\_gen2\\_firmware](https://github.com/oymotion/roh_gen2_firmware)


**ROH-LiteS001**

[https://github.com/oymotion/roh\\_lites\\_firmware](https://github.com/oymotion/roh_lites_firmware)

**ROH-A001/ ROH-A002:**


[https://github.com/oymotion/roh\\_firmware](https://github.com/oymotion/roh_firmware)

, click on the green "Code" button on the page, then click "Download ZIP" to download the compressed package; or copy the link and use the command "git clone [https://github.com/oymotion/roh\\_gen2\\_firmware.git](https://github.com/oymotion/roh_gen2_firmware.git)" in the command window to download (Git Bash must be installed).

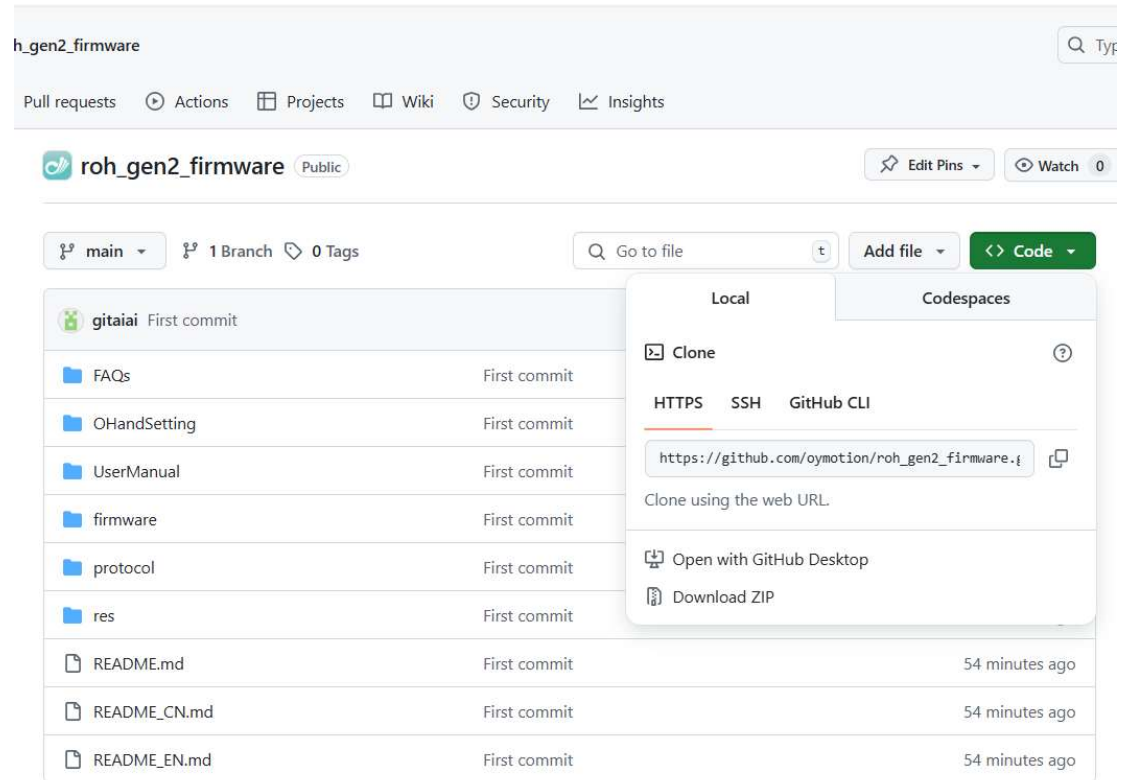


## 2. Run Software

- 2.1 According to the operating system, open the **OHandSetting** directory. **Windows:** Double click **OHandSetting.exe** to run directly. **Ubuntu:** After installing the environment according to the steps in the **compile-and-run on-ubuntu.md** file, enter the software root directory and add the execute permission 'sudo chmod+x' file name to OHandSetting in the **OHandSetting.sh** and bin folders. After completing everything, enter 'bash OHandSetting.sh' in the root console to start the software.
- 2.2 Connect the USB-RS485 module externally, make sure the CH340 driver has been installed on the computer, click '**Refresh**' button to recognize the port number.
- 2.3 Turn on the power of the ROHand, wait until the self-test is completed, click on the '**Scan**' button to identify the device, when the '**Device**' combo box appears in the device information, you can click on the '**Stop**' button to stop scanning. When the device information appears in the '**Device**' combo box, you can click '**Stop**' button to stop scanning.
- 2.4 Click '**Option – Theme**' to set the theme color of the interface, there are '**light**' and '**dark**' mode.

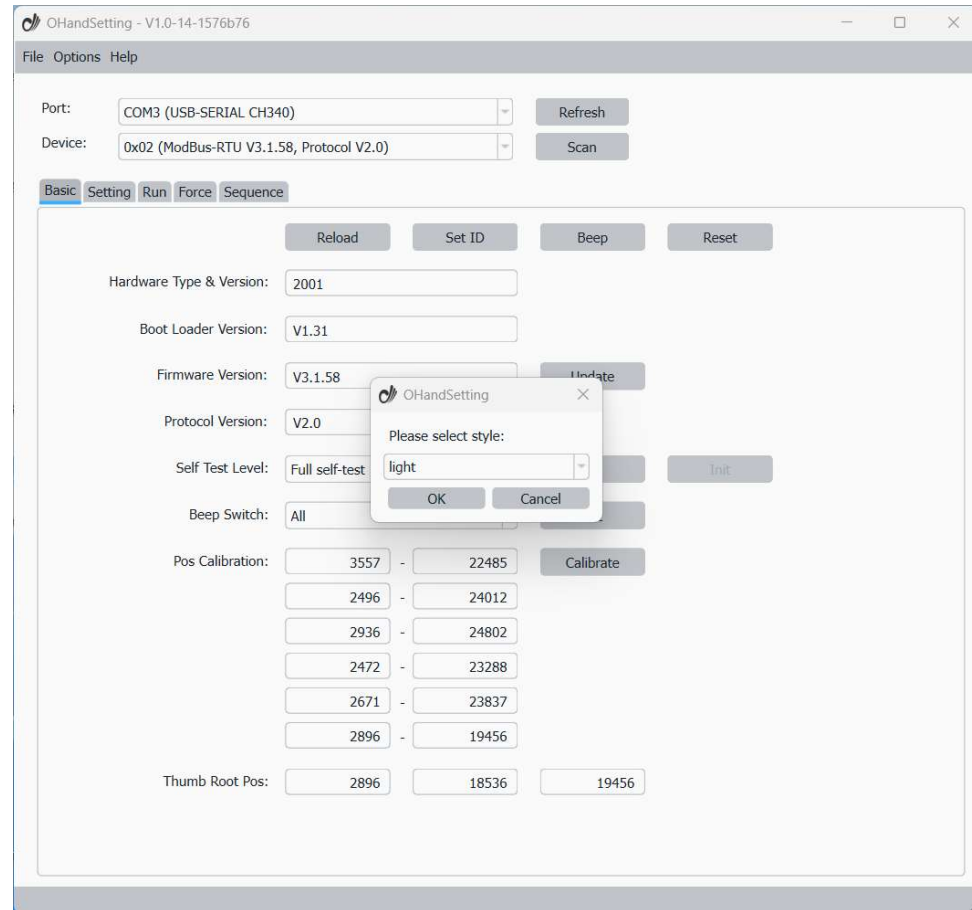


2.5 Click **'Help – About'** to view the software version information and supported protocol versions.

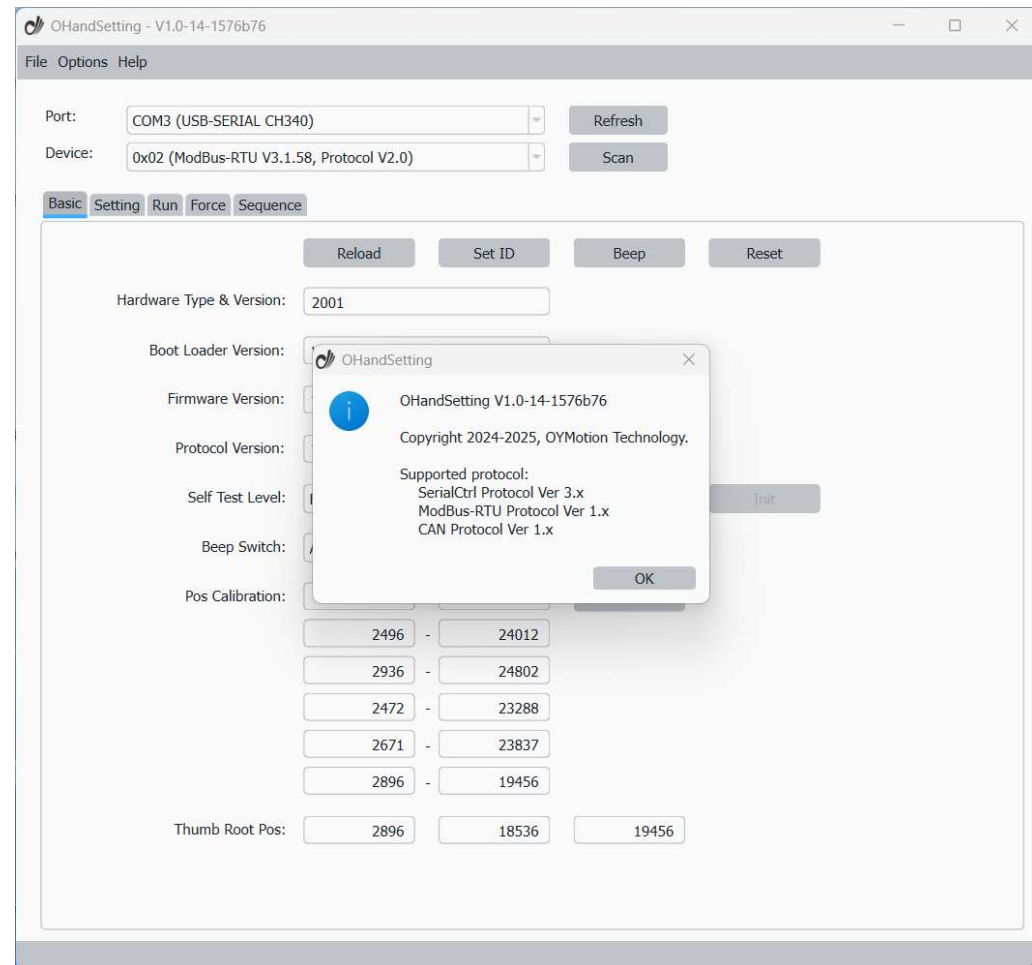


### 3. Update Firmware


- 3.1 Enter '**Basic**' interface, click '**Update**' button, or select '**File - Force Upgrade**', it will enter the firmware upgrade mode. Select the local file as the source of firmware, and choose the latest **upd** file in the firmware directory.

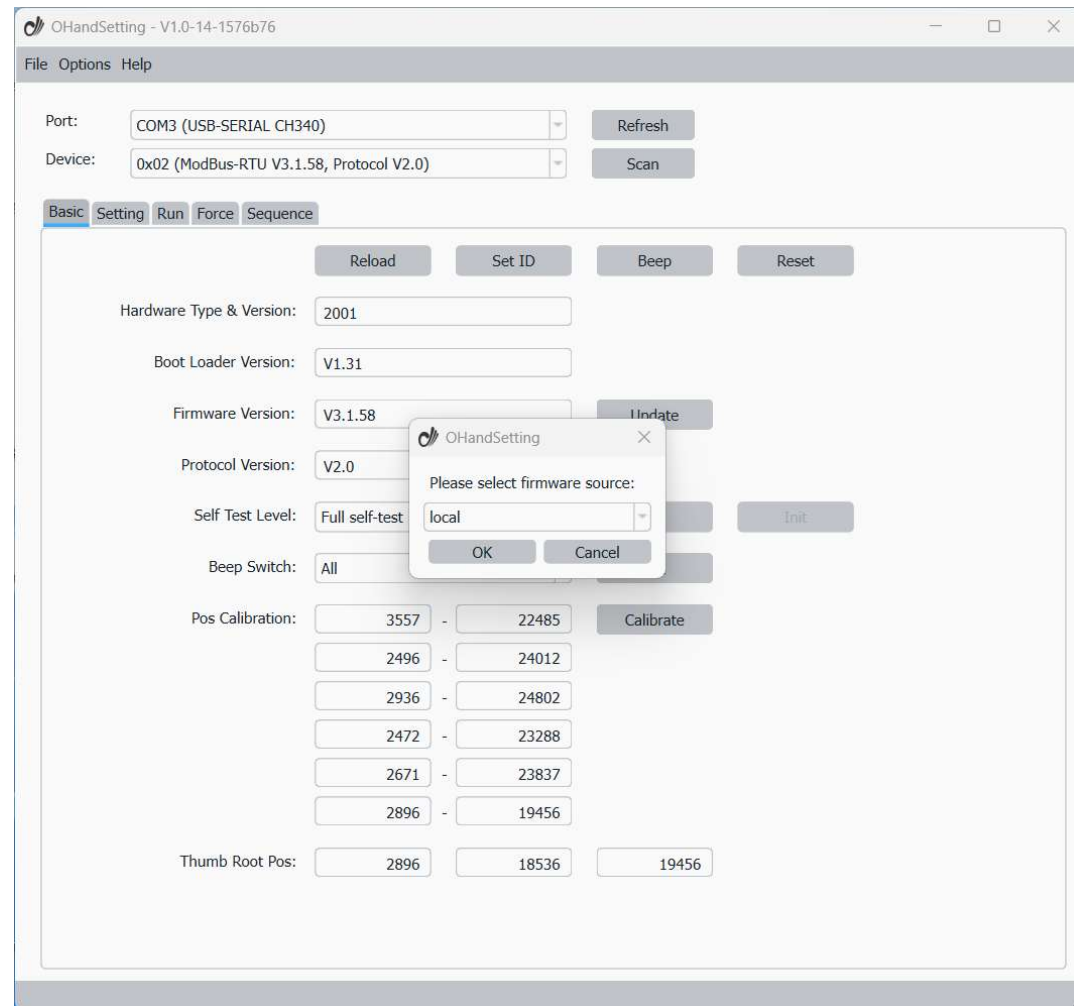

3.2 When prompted, turn off the power to the device and click 'OK'.

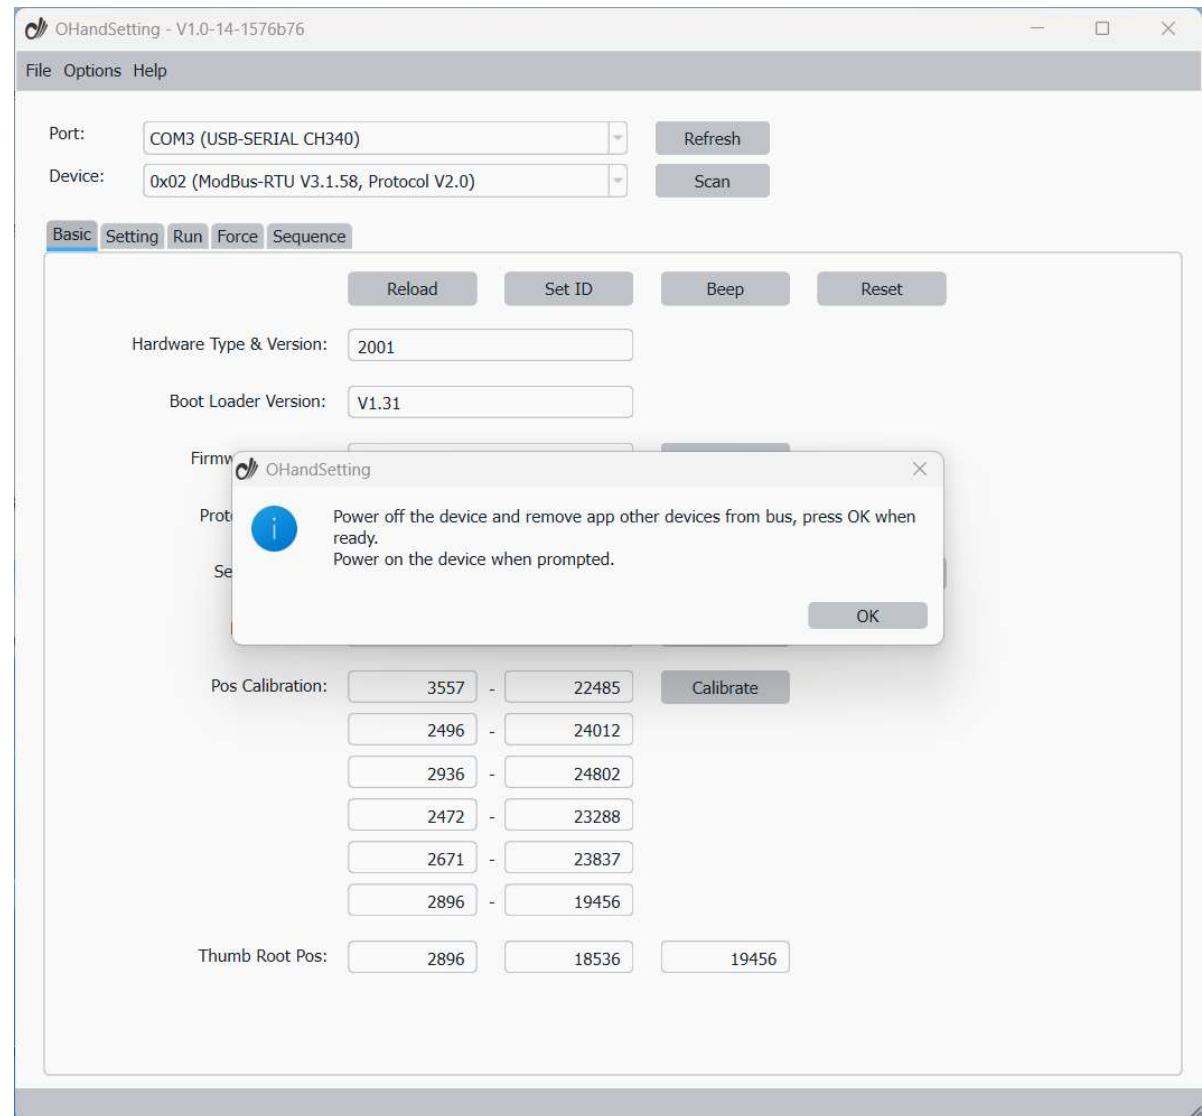


3.3 Wait for the software to process the upgrade file, at this time the progress will be shown in the status bar at the bottom left corner.

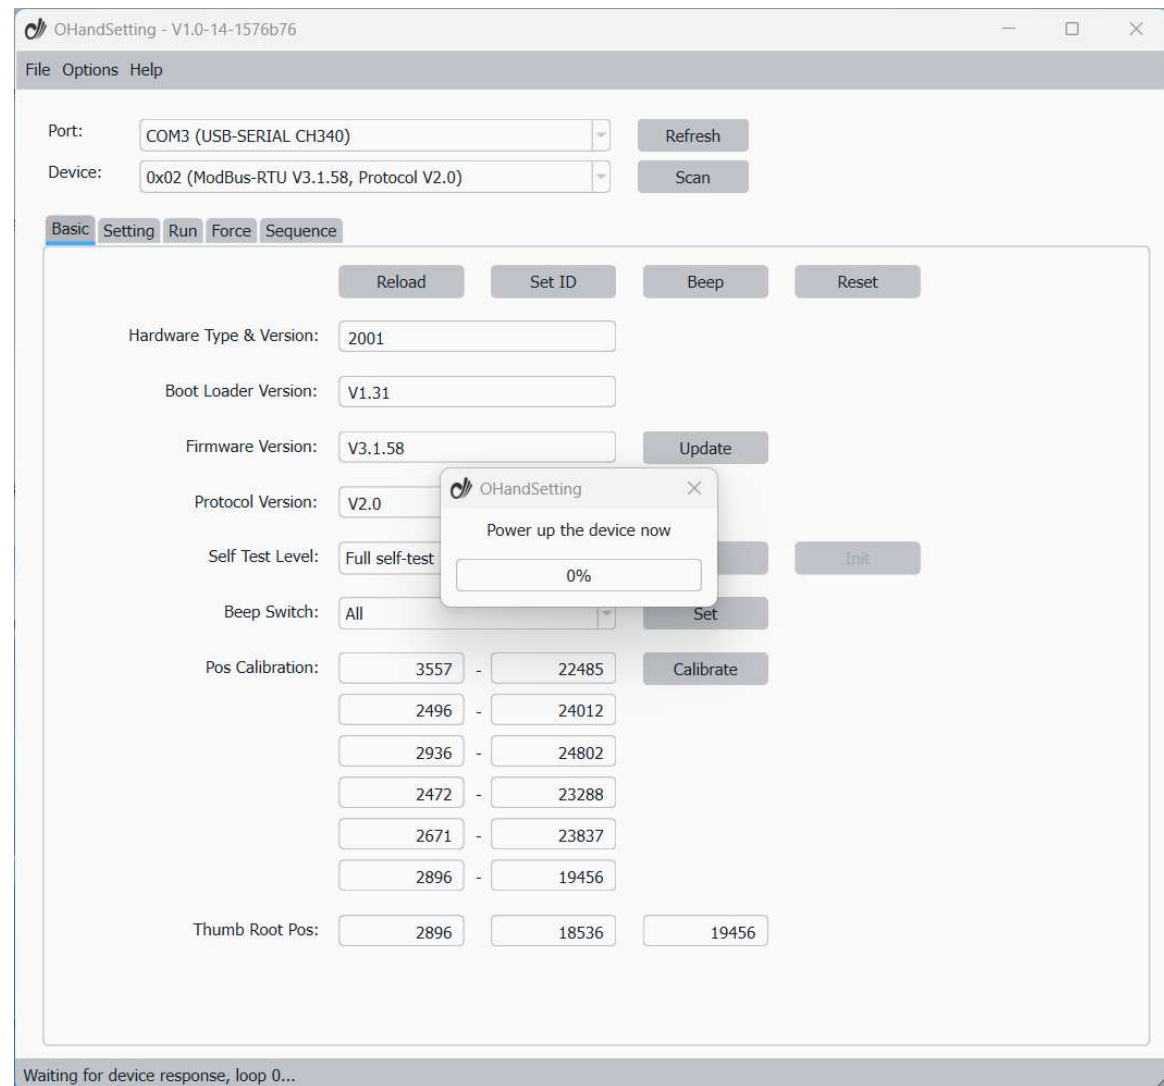




3.4 After the upgrade file is processed, you will be prompted to **‘Power up the device now’**, and the status bar at the bottom left corner will show **‘Waiting for device response, loop 0...’**, please power on the device before the **10th** loop, or the upgrade will be failed, and you have to go back to step **3.1** to upgrade again.

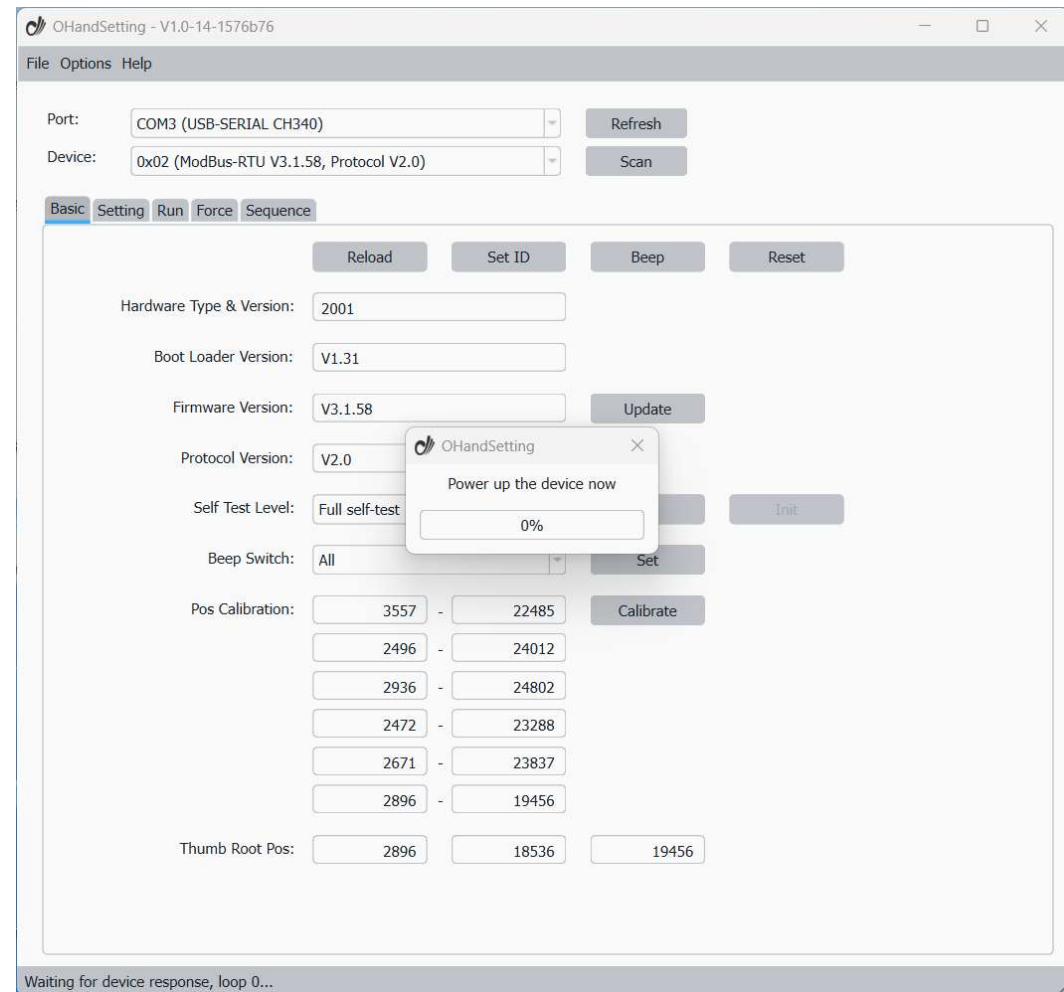

3.5 Wait for the upgrade progress to reach 100% to complete the upgrade, after the upgrade is completed, device will reboot , at this time to **scan** the device again, will reload the device information.

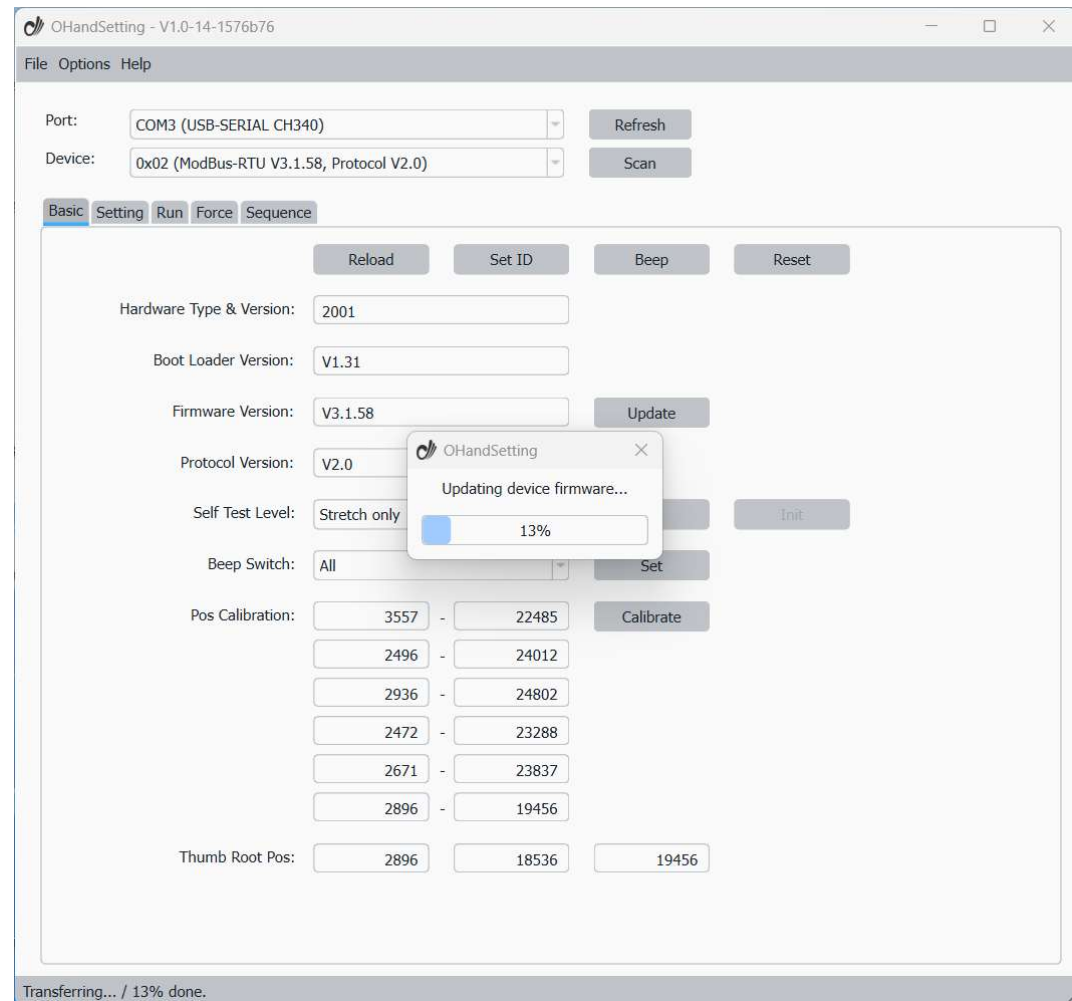

## 4. Basic Information Setting

4.1 **Reload:** Reload and display device basic information.

4.2 **Set ID:** Set the device ID number, support from **0x02** to **0xFF** (**0x01** is the host), device will reboot after successful setting.

4.3 **Beep:** Buzzer sounds for a period of time.

4.4 **Reset:** Reboot device.

4.5 **Update:** Update firmware, reference to step 3.

The screenshot displays the OHandSetting software window, titled "OHandSetting - V1.0-14-1576b76". The interface includes a menu bar with "File", "Options", and "Help". Below the menu bar, there are fields for "Port:" (COM3 (USB-SERIAL CH340)) and "Device:" (0x02 (ModBus-RTU V3.1.58, Protocol V2.0)), each with a "Refresh" and "Scan" button respectively. A tabbed interface at the bottom shows "Basic", "Setting", "Run", "Force", and "Sequence" tabs, with "Basic" currently selected. The "Basic" tab contains several sections of controls: a top row with "Reload", "Set ID", "Beep", and "Reset" buttons; a "Hardware Type & Version:" field set to "2001"; a "Boot Loader Version:" field set to "V1.31"; a "Firmware Version:" field set to "V3.1.58" with an "Update" button; a "Protocol Version:" field set to "V2.0"; a "Self Test Level:" dropdown set to "Stretch only" with "Set" and "Init" buttons; a "Beep Switch:" dropdown set to "All" with a "Set" button; a "Pos Calibration:" section with a grid of input fields for values like 3557, 22485, 2496, 24012, etc., and a "Calibrate" button; and a "Thumb Root Pos:" section with input fields for 2896, 18536, and 19456.


#### 4.6 Self Test Level:

**Full self-test** — Fingers fully open and fully closed;

**Stretch only** — Finger fully open;

**Wait for command** — Wait for the command to start the self-test, and click the **'Init'** button after the setting is successful, then the device will be self-tested.

After selecting it, click the **'Set'** button on the right side, **'Set self-test level succeed'** will be shown on the status bar at the bottom left corner, reboot the device or click **'Reset'** to check it.

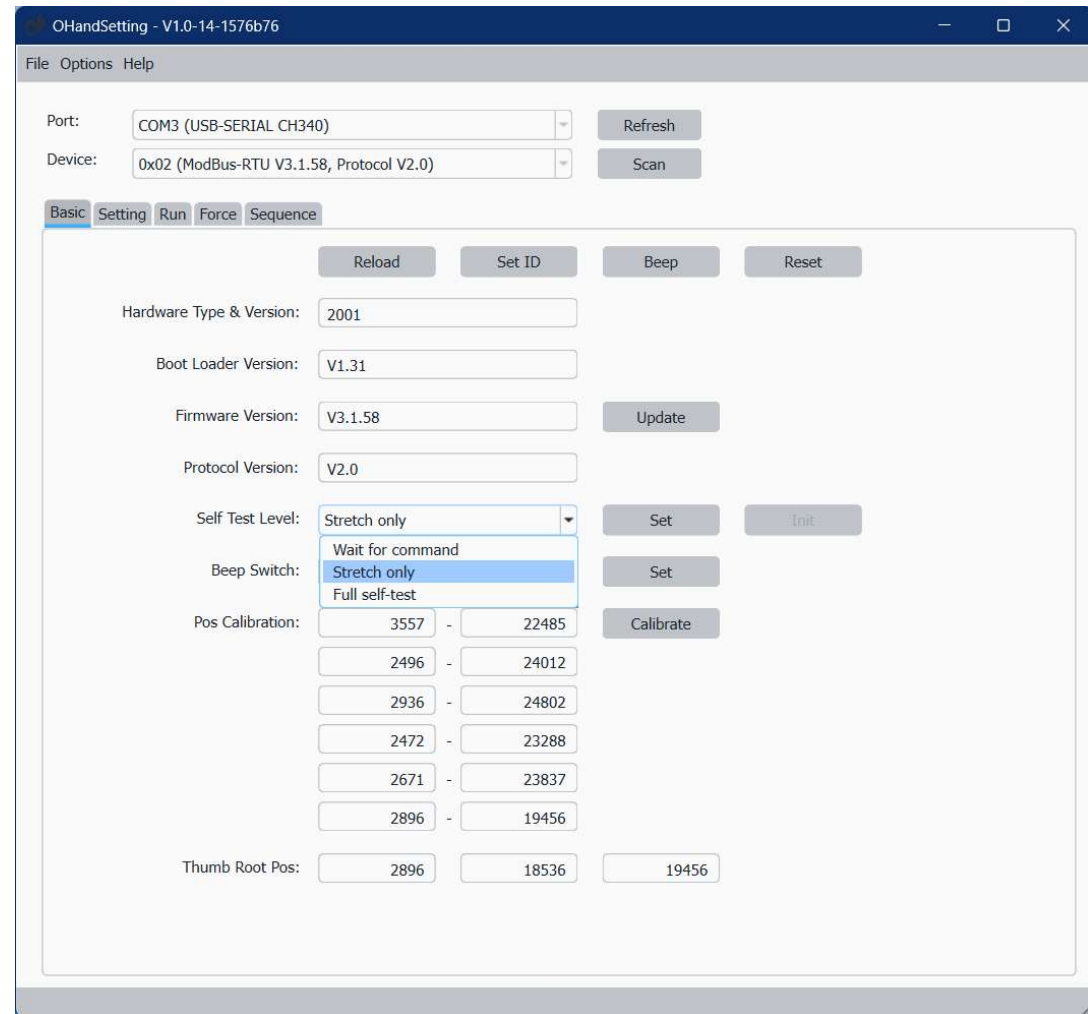


**4.7 Beep Switch:** The switch that sounds the buzzer is divided into:

**All** — Normal sound;

**Basic Only** — The buzzer will sound under certain circumstances, otherwise it will not sound.

After selecting, click the **‘Set’** button on the right side, the status bar at the bottom left corner will show **‘Set beep switch succeeded’**, click the **‘Beep’** button to check.

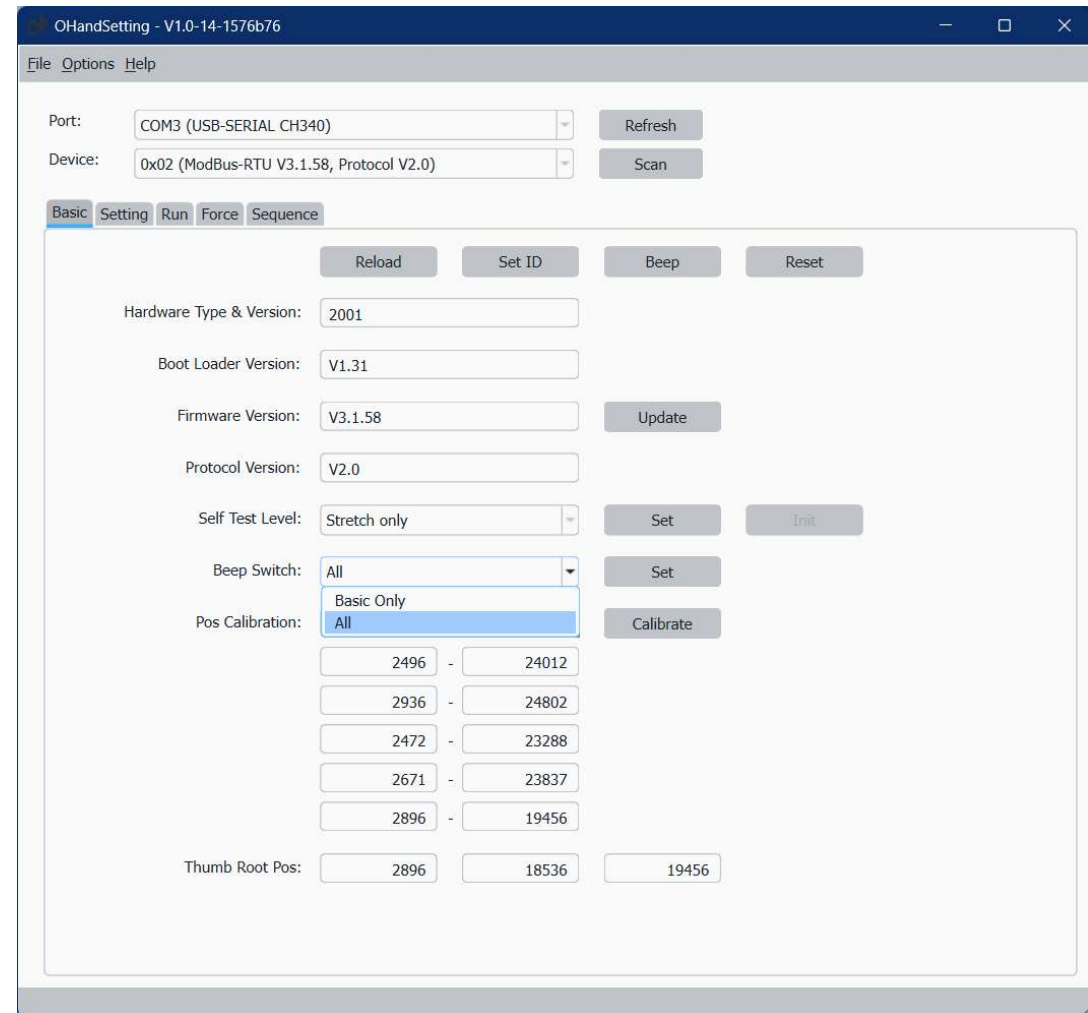

**4.8 Calibrate:** This function is a factory setting, not available to users at this time, and will display calibrate information in the edit box.

The screenshot shows the OHandSetting software interface. The title bar reads 'OHandSetting - V1.0-14-1576b76'. The menu bar includes 'File', 'Options', and 'Help'. Below the menu bar, there are two dropdown menus: 'Port:' set to 'COM3 (USB-SERIAL CH340)' and 'Device:' set to '0x02 (ModBus-RTU V3.1.58, Protocol V2.0)'. To the right of these are 'Refresh' and 'Scan' buttons. Below these are five tabs: 'Basic', 'Setting' (selected), 'Run', 'Force', and 'Sequence'. The 'Setting' tab contains several buttons at the top: 'Reload', 'Set ID', 'Beep', and 'Reset'. Below these are several input fields and buttons: 'Hardware Type & Version:' with value '2001'; 'Boot Loader Version:' with value 'V1.31'; 'Firmware Version:' with value 'V3.1.58' and an 'Update' button; 'Protocol Version:' with value 'V2.0'; 'Self Test Level:' with value 'Stretch only' and a 'Set' button; 'Beep Switch:' with value 'All' and a 'Set' button; 'Pos Calibration:' with a table of values and a 'Calibrate' button; and 'Thumb Root Pos:' with three input fields containing '2896', '18536', and '19456'.

Pos Calibration:	Value 1	Value 2
	3557	22485
	2496	24012
	2936	24802
	2472	23288
	2671	23837
	2896	19456

Thumb Root Pos: 2896 18536 19456

## 5. Motor Parameters Setting


5.1 **Position PID:** ROHand has a built-in PID algorithm, which allows you to select the position control PID on the setting interface. Click **"Read"** to read the gain parameters of each motor, and click **"Write"** to write the parameters. After successful writing, the written value will be displayed in the editing box, otherwise it will remain unchanged.

5.2 **Force PID:** The ROHand force feedback adopts the PID algorithm. You can select the force control PID in the setting interface, click **"Read"** to read the gain parameter of the force control, click **"Write"** to write the parameter. After successful writing, the written value will be displayed in the editing box, otherwise it will remain unchanged.

**Note: Only the ROH-AP001 model dexterous hand supports this function**

5.3 **Current Limit:** Set the maximum limit current of the motor. When the motor is locked and the current exceeds the limit, the motor will stop and wait for a new command before restarting. Click **"Read"** to read the limit value, click **"Write"** to write the limit value. After successful writing, the write value will be displayed in the editing box.

**Note: This feature is currently not supported in the current version**

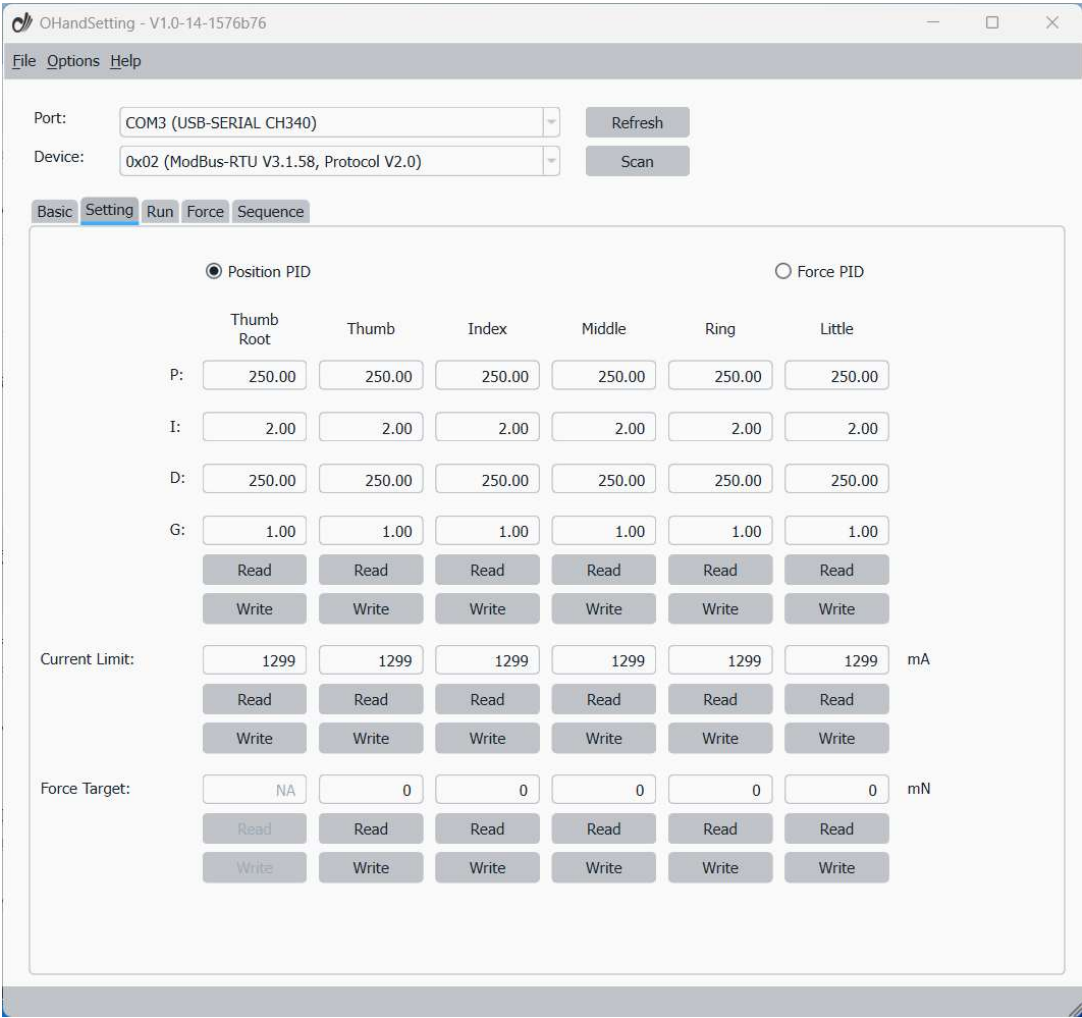


**5.4 Force Target:** Set the force target value for the dexterous fingertip, with a default value of 0 when turned on. Click "**Read**" to read the target value, and click "**Write**" to write the target value. After successful writing, the write value will be displayed in the editing box. After successful setting, the finger will be completely bent. When the force on the finger sensor is less than the target value, the finger will be able to contract, and when it is greater than the target value, it will retract to maintain the set force value.

**Note: Only the ROH-AP001 model dexterous hand supports this function**



## 6. ROHand Control

**6.1 Position control:** Select '**Position**' in the combo box, drag the vertical slider to display the corresponding position value in the edit box below, and the finger will run to the target position after releasing the slider, or write the value within 0 - 65535 (finger from open to closed) in the edit box, click '**Set**' and the finger will run to the target position.

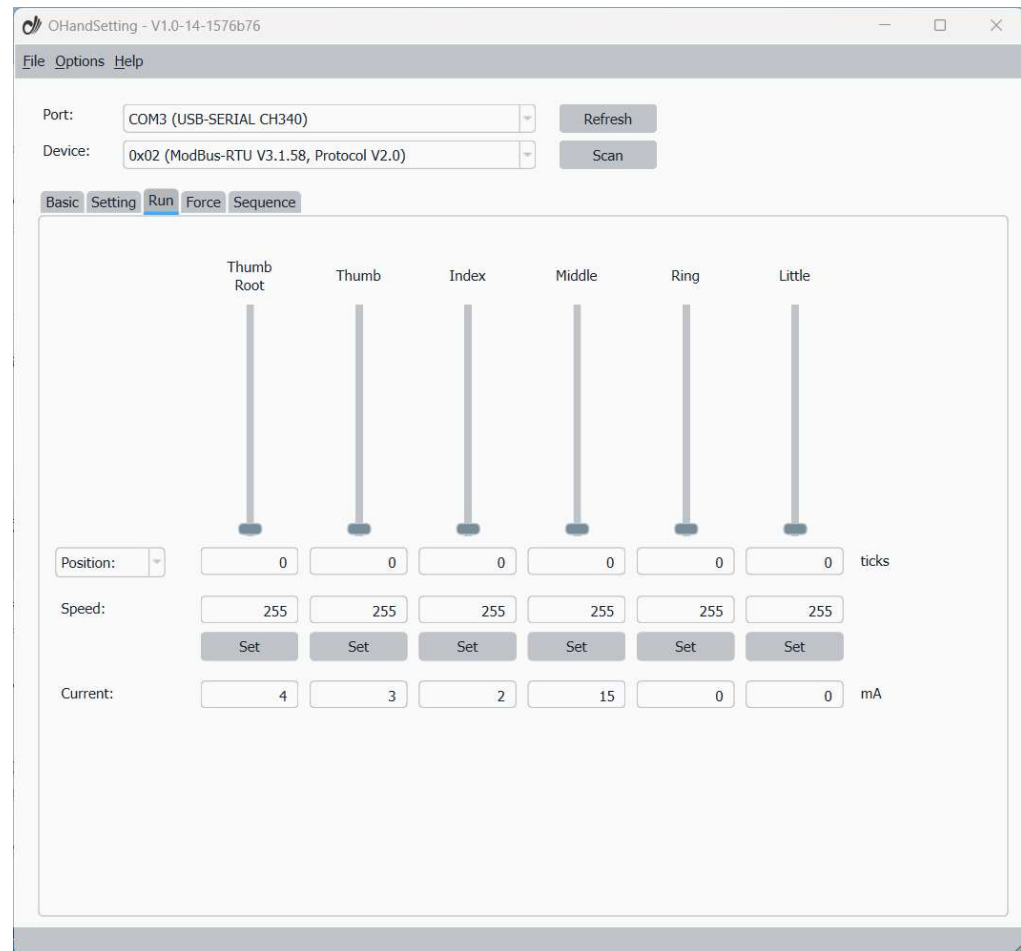


**6.2 Angle control:** Select ‘Angle’ in the combo box, when you move the vertical slider, the corresponding angle value will be displayed in the edit box below, after releasing the slider, the finger will run to the target angle (when you move it to the maximum or minimum position, you can read the maximum or minimum value of the finger angle from the edit box); or write the target angle value in the edit box, click ‘Set’ and then the finger will run to the target angle. For the definition of finger angle, please refer to protocol directory.

OHandModBusRTUProtocol EN.md

OHandSerialProtocol EN.md.

**6.3 Speed control:** The default value is 255 ticks/s, write the value within 0 - 255 in the edit box and click ‘Set’ to take effect, you can observe the running speed of the finger by position/angle control.

**6.4 Current read :** After entering the **Run** widget or rescanning the device, the current value collected from the motor encoder will be displayed in real time in the edit box.

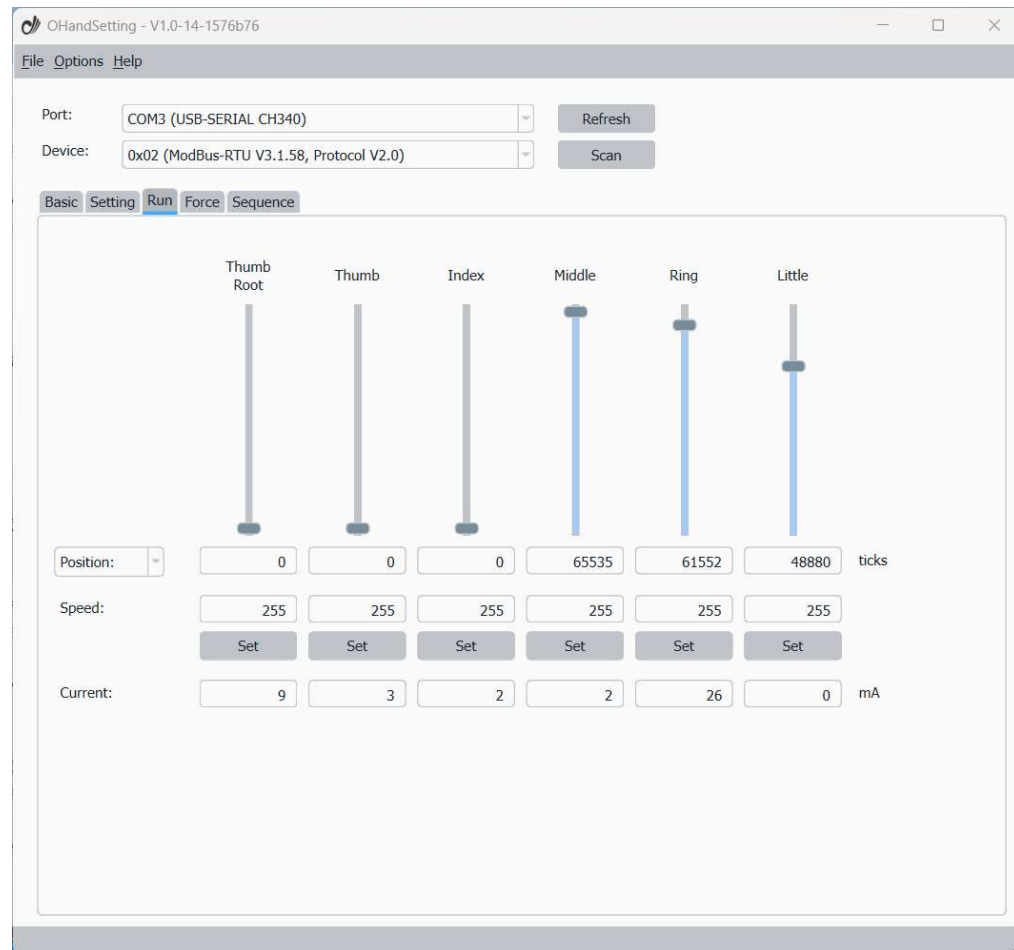


## 7. Force Display

**7.1 Choose a dexterous hand:** Based on the actual connected dexterous hand, choose either the **Left Hand** or **Right Hand**. Otherwise, when pressing the dexterous hand sensor, the force heatmap will not display correctly.

**Note: Only the ROH-AP001 model dexterous hand supports this function**

**7.2 Force:** Real time display of the resultant force of pressure on each point of the dexterous finger tip in mN. Clicking "Reset" can reset the sensor value to zero and eliminate stress.

**Note: Only the ROH-AP001 model dexterous hand supports this function**

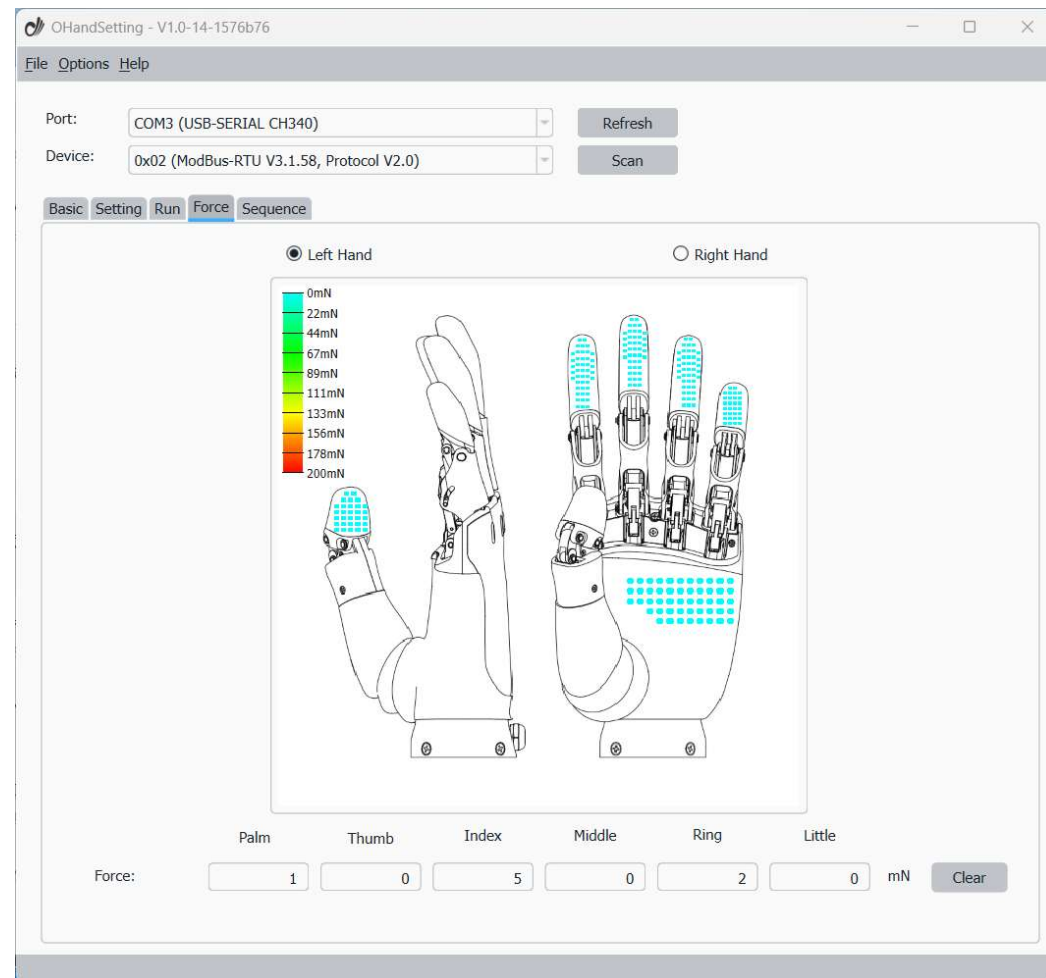

## 8. Action sequence

**8.1 Action set:** Same to the position control, you can move the vertical slider to control ROHand to a specific gestures. Then click button ‘+’ to store the gesture and set the delay time before running the gesture. Also you can click button ‘-’ to delete the existing data. Click button ‘^’ or ‘v’ to reorder the gestures.

**8.2 Load and run:** When all gestures are set, click the ‘Run’ button and the device will perform the actions in the set order, and click ‘Stop’ button to stop running. Click ‘Save’ button to save the current action data, the file will be saved in json format. Click ‘Load’ button will read the action sequence file and load the gesture data in the form.

OHandSetting - V1.0-14-1576b76

File Options Help

Port: COM3 (USB-SERIAL CH340) Refresh

Device: 0x02 (ModBus-RTU V3.1.58, Protocol V2.0) Scan

Basic Setting Run Force Sequence

Thumb Root Thumb Index Middle Ring Little

Position: 728 0 39465 33673 21361 0 ticks

Speed: 255 255 255 255 255 255

Delay: 0 ms

1	728	0	39465	33673	21361	0
2	728	0	39465	33673	21361	0

+ - ^ v

Run Stop Load Save

## 9. FAQs

- 9.1 OHandSetting can control multiple dexterous hands through one USB to 485 module, only need dexterous hands to set different ID (e.g. 0x02 and 0x03), and switch the dexterous hands that need to be controlled in the device drop-down box.
- 9.2 If you can't control the dexterous hand after reconnecting the dexterous hand or restarting after power failure, please refresh the serial port first, and then rescan the device to refresh the device information.
- 9.3 If you can't scan the device information, please try to upgrade the firmware first and then scan it again, if there is no answer from the device during the upgrade process, please check the external line through and through, refer to the FAQs\_EN.md document in the FAQs file directory, if you still can't solve the problem, please contact technical support [faq@oymotion.com](mailto:faq@oymotion.com).

## **10.Contact Details**

Company Name: Shanghai OYMotion Technologies Co., Ltd.

Address: 6F, Building 2, Lane 222, Guangdan Road, Pudong New Area, Shanghai, China.

Postcode: 201318

Tel: +86-21-63210200

Mail: [info@oymotion.com](mailto:info@oymotion.com)

Website: [www.oymotion.com](http://www.oymotion.com)

Download: [www.github.com/oymotion](https://www.github.com/oymotion)

## 11.Revision history

Modification date	Version	Revision content
2024.10.30	V1.0	Initial version.
2024.12.05	V1.1	Added action sequence; Modified revision history.
2025.6.24	V1.2	Modified the image; Added Ubuntu version instructions; Modified revision history.
2025.6.25	V1.3	Added force display; Modified revision history.
2025.9.4	V1.4	Added LiteS001 links; Modified revision history.